

INVOUGHT

This FM-700 is one kind of our satisfactory and durable foam machine series, which can be used all kinds of professional performance, Disco Hall, Music Club, Studio Home party to create special fantastic effects. For your using conveniently and freely, before operating it, please read this manual instruction carefully.

I .Specifications

Model No :	FM-700
Name :	FOAM MACHINE
Rated Voltage :	AC 230-240V, 50Hz
Rated Power :	938 Watts
Fuse :	250V, 5A
Size :	L600 x W290 x H390 mm
Weight :	15.0Kg

II . Operation Directions

1. Remove all the packing before use. Please contact with your vendor if you find any destroy or omitting parts.
2. Place the machine horizontally and loose the tank lid to pour the high quality foam liquid.
3. Connect the machine with proper power supply (230-240V).
4. Turn on the rocker switch to spray when you need, and you can last a long time until the liquid is used up.
5. You should turn off the machine and pour in special liquid when the liquid is used up.
6. Turn off the rocker switch when you want to stop spraying.

III . Precautions

1. Indoor use only, and prevent the machine from the moisture and rains.
2. Keep the sloping angel less than 15°.
3. Be sure leaving enough space for good ventilation, cooling and away from other objects 20cm at least.
4. Far away from children's reach.
5. Forbid the machine closing up to any flame, flammable and explosive substance to avoid fire and explosive.
6. Don't spraying towards anybody.
7. Forbid using it when liquid depletion and pour high quality liquid immediately to avoid damaging the machine.
8. Pour high quality liquid carefully to avoid the liquid overflow resulting in electrical shortcut.
9. Forbid pouring flammable liquids such as gas, perfume etc.

10. You shall switch off the machine if you do not need it. If the machine is in a stationary use, then you must install an additional switch, which switch off all pole of the power supply.
11. Only special person can exchange the power cord.
12. Any other questions please contact with your vendor.

IV. Normal Exceptions and Maintenance

1. Unqualified foam liquid results in block or leakage. Use our high quality foam liquid only.
2. Please clean the machine not more than 40 hours with the mix cleaner consist of 80% pure water and 20% vinegar as follows.
 - (1). Before use, dismount and clean the filter with vinegar to ensure without any remains with it.
 - (2). Empty the tank, and then pour clean liquid instead of foam liquid again for next operation.
 - (3). Fixing the filter and pouring foam liquid again for next operation.
3. Cut off the power when poor foam and check liquid、fuse 、 and power plug carefully.
4. If no exceptions turn on and push the button 30 seconds, no foam sprays also. Please contact with your vendor.
5. For long idleness be sure to unplug the power.

V. Others

1. Don't pull the cloth on the front board.
2. If you want to exchange anything of the machine, please contact with your vender.
3. Only proofed electrician can take-down this machine.

VI Packing List

Foam machine :	1PCS
User's Manual :	1PCS

